


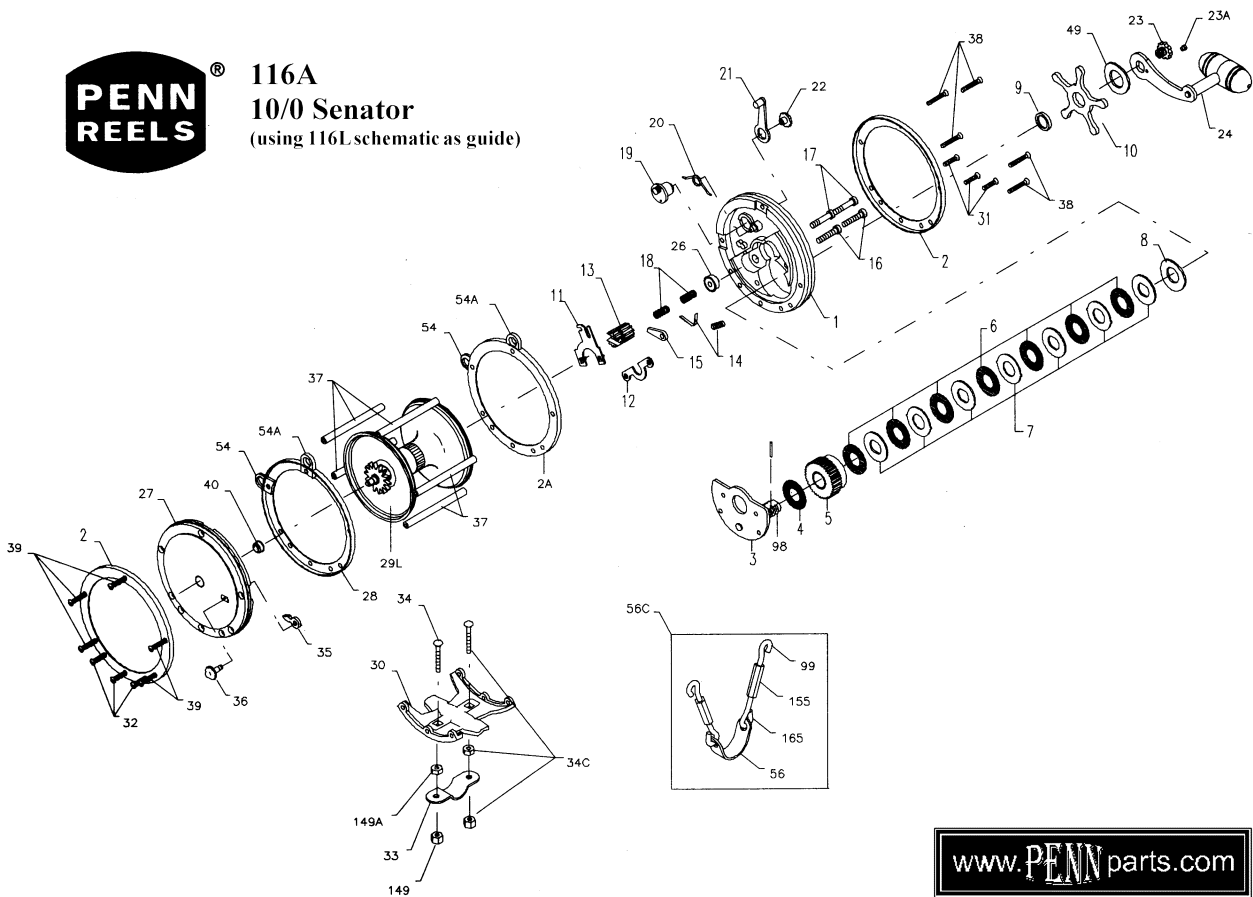

116A
10/0 Senator
(using 116L schematic as guide)



Penn Reel Parts list for:

Model: 116A

10/0 Senator

KEY NO	PART NO.	DESCRIPTION	KEY NO	PART NO.	DESCRIPTION
1	1-116A	RIGHT SIDE PLATE	26	26-116	RIGHT SIDE BEARING
2	2-116-O	OUTER RING (2 REQ.)	27	27-116	LEFT SIDE PLATE
2A	2-116-I	INNER RING SIDE RING	28	28-116-I	INNER LEFT SIDE RING
3	3-116	BRIDGE W/ SLEEVE	30	30-116A	STAND
4	4-116	FIBER WASHER	31	39-12	R.S. STAND SCREW
5	5-116	MAIN GEAR	32	32-21	L.S. STAND SCREW
6	6-116	DRAG WASHER (7 REQ.)	33	33-116	ROD CLAMP
7C	7C-116	METAL DRAG WASHER SET	34	34-116	CLAMP SCREW
8	8-116	TENSION SPRING	35	35-115	CLICK TONGUE
9	9-116	SPACING SLEEVE	36	36-115	CLICK BUTTON
10	10-116	STAR DRAG WHEEL	37	37-116A	FRAME POST (8 REQ.)
11	11-116	ECCENTRIC JACK	38	39-13	RIGHT/LEFT SIDE POST SCREW (8 REQ.per side)
12	12-116	PINION YOKE	40	26-116	LEFT SIDE BEARING
13	13-116	PINION	54	54-114	HARNESS LUG (2 REQ.)
14	14-116	DOG SPRING	54A	54-116	HARNESS LUG (2 REQ.)
15	15-116	DOG	56	56-116	ROD BRACE
16	16-114	LOWER BRIDGE SCREW (2 REQ.)	56C	56C-116	ROD BRACE (COMPLETE)
17	17-114	UPPER BRIDGE SCREW (2 REQ.)	56P *	56P-117	ROD BRACE PAD
18	18-114	CLUTCH SPRING (2 REQ.)	98	98-116	GEAR SLEEVE
19	19-115	ECCENTRIC	99	99-116	HOOK SCREW L.H. THREAD (2 REQ.)
20	20-114	ECCENTRIC SPRING	149	149-116L	HEX NUT (2 REQ.)
21	21-116	ECCENTRIC LEVER	149A	149-116H	CLAMP NUT (2 REQ.)
22	22-60CH	ECCENTRIC SCREW	155	155-116	TURN BUCKLE (2 REQ.)
23	23-116	HANDLE SCREW	165	165-116	HOOK SCREW L.H. THREAD (2 REQ.)
23A	110-60	HANDLE LOCK SCREW	<i>*Not Shown</i>		
24	24-116	HANDLE			

NOTE: Many of www.pennparts.com schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.

last update 1/22/04